SECURITY SYSTEM APP QUICK START GUIDE





Scan the QR code or find "TuyaSmart" on APP Store or Google Play to get free APP.

LOG IN

Upon download and installation of App on your phone, please follow the on-screen prompts to register and login to add your hub.

ADDING YOUR HUB

1. Smartlink Configuration

- ↓ Tap Add Device or "+", select Security & Sensor and tap Alarm.
- ↓ On your hub, tap √ to go to Wi-Fi > Smartlink Configure, make sure your device is in SmartLink mode with LED is blinking rapidly.
- ↓ Tap Confirm indicator rapidly blink, choose your local Wi-Fi and input password(Only 2.4Ghz Wi-Fi network is supported).
- ↓ Wait the configuration finishes, tap **Done**.

2. SoftAP Mode

- Please change to Soft AP mode if the configuration fails in SmartLink mode.
- ↓ Tap AP Mode at Add Device page.
- ↓ On your hub, tap √ to go to Wi-Fi > SoftAP Configure, make sure your device is in SoftAP mode with LED is blinking slowly.
- ↓ Tap Confirm indicator slowly blink on your APP, choose your local Wi-Fi and input password(Only 2.4Ghz Wi-Fi network is supported).
- ↓ Tap Confirm > Go to Connect, then choose the Wi-Fi hotspot named "Smartlife-XXXX" in your Wi-Fi list. Go back to your APP to wait the Wi-Fi configuration finishes, then tap Done.

Tips: after the configuration is done, you might tap ∠ > Share

Device to share your hub with your family.

HOW TO ADD PHONE NUMBER

- ↓ Tap Setting > Alarm call number in Contact column to add phone numbers for alarm call.
- ↓ Tap Setting > Alarm SMS number in Contact column to add phone numbers for alarm SMS.
- ↓ Tap Alarm call to turn alarm call on or off.
- ↓ Tap Alarm SMS to turn alarm SMS on or off.

Tips: up to 5 alarm call numbers and 5 alarm SMS numbers can be added.

HOW TO ADD ACCESSORY

Pick your device at home page, tap **Accessories > Add**, then follow below tips to trigger your accessory to be added (After the accessory is added, it will be classified to each corresponding column automatically)

То	Do like this before the hub sniffer countdown expires	
Add a wireless sensor	Press the panic button or separate the sensor from the magnet by at least 1.0 inches(2.5 cm)	
	Press the pairing button or trigger it with an motion	
Add a remote Tag	Press any button on your remote tag	(A)
Add a RFID tag	Tap RFID Tag on the RFID read zone on your hub	

Tips: up to 100 wireless detectors, 10 remote tags and 10 RFID can be added,

EXIT / ENTRY DELAY

Change Delay Value

Tap Exit delay or Entry delay to change the delay time

Tips: default exit delay is 40 seconds and entry delay is 30 seconds

HOW TO ARM/DISARM

Tap to Away arm

Tap 1 to Home arm.

Tap fo Disarm

Tap sos to trigger an emergency alarm.

Tips: tap **Setting > Timer** to arm/disarm your system on schedule.

More details about using your security system, please refer to USER'S GUIDE.